

This bearing is packing with grease from the factory and can be installed as received. If you prefer to remove one or both of the seals, to be exposed to the 600 W oil, then use a small screwdriver blade or knife to pop the plastic seal off.