

A-7230

MODEL A FORD SHIFT LEVER SPRING REMOVAL AND INSTALLATION TOOL

- HOW TO USE -

REMOVAL

1. SECURELY LOCK SHIFT LEVER ASSEMBLY IN VISE FACING UPWARD.
2. PLACE TOOL OVER SHIFT LEVER AND PUSH DOWN FIRMLY ON CLIP.
3. PRY CLIP OUT SLIGHTLY WITH SMALL SCREW DRIVER AND REMOVE WITH PLIERS WHILE FIRMLY HOLDING SPRING IN COMPRESSED POSITION, WHEN CLIP IS REMOVED SLOWLY EASE OFF AND THEN REMOVE SPRING.

INSTALLATION OF SPRING

1. INSTALL NEW SHIFT LEVER AND HOLD SECURELY IN VISE FACING UPWARD.
2. PLACE SPRING OVER SHIFT LEVER.
3. INSTALL TOOL AND COMPRESS SPRING ALL THE WAY.
4. INSTALL CLIP IN PROPER POSITION ON SHIFT LEVER AND ON "TOP" OF THE 2 FINGERS THAT ARE USED TO COMPRESS AND HOLD SPRING.
5. WHEN CLIP IS PROPERLY INSTALLED SIMPLY TILT TOOL TO REAR AND REMOVE.