

16360 EMERGENCY IGNITION JUMPER CABLE

- 1 Remove the ignition cable from the base of the distributor casting, and screw in the threaded end of the emergency jumper cable
- 2 Remove the red wire from the coil that comes down from your ignition switch. Using the alligator clip fasten the emergency jumper cable to the post on the coil where the red wire was removed.

There is NOW VOLTAGE going from the coil to the distributor, so you can now start and drive the car. To turn the car off simply remove the alligator clip from the ignition coil. CAUTION FAILURE TO REMOVE THIS WIRE FROM THE COIL WHEN THE CAR IS NO LONGER RUNNING MAY RESULT IN DAMAGE TO THE IGNITION POINTS, AND IT WILL DRAIN THE BATTERY.

BRATTON'S

ANTIQUE AUTO PARTS



800-255-1929 Phone

www.brattons.com

800-774-1930 Fax

1606 Back Acre Circle

Mount Airy, MD 21771

Your source for Quality Model A Ford Parts since 1976