

WIRELESS LOWER DISTRIBUTOR PLATE POSTIVE CONNECTION-NO PIGTAIL- NO ALTERATIONS INSTALLATION INSTRUCTIONS

- 1. Remove the upper and lower plates.**
- 2. Disconnect the pigtail wire from the point post on the bottom of the upper plate and discard the lower plate.**
- 3. Replace the nut that held the pigtail to the point post with the two (2) lock washers and the acorn nut provide (if the point post is not tight add more washers. It must be tight.)**
- 4. Install the lower plate into the distributor casing body.**
- 5. Install the spring and the lower plate- Assure that the screws from the point block do not extend so far that they can touch the brass plate.**
- 6. Re-assemble the distributor. Be sure to check timing.**