BRATTON'S

ANTIQUE AUTO PARTS



800-255-1929 Phone www.brattons.com

800-774-1930 Fax 1606 Back Acre Circle Mount Airy, MD 21771

Your source for Quality Model A Ford Parts since 1976

MODEL A COTTER PIN USAGE CHART

QTY.	Location	QTY.	Location
	1/16x1/2		3/32 × 3/4
4	Equalizer operating shaft cap- 28 only	2	Operating wedge stud assy
4	Brake cross shaft frame bracket	2	Brake cross shaft guide- 28 only
2	Hand brake lever bracket- 28 only	2	Spindle bolt locking pin- 28/29 only
1	Hand brake lever retract spring- 28 only	2	Spindle connecting rod end
6	Rear engine support pads	1	Steering gear housing bolt
		1	Steering gear arm
	3/32 X 1/2	1	Fan shaft
	Hand brake lever pawl- 28 only	6	Main engine bearings
	Hand brake lever rod	1	Front engine support
	Hand brake lever pawl pin- 28/29 only	8	Front and rear spring shackles
	Front radius rod retaining pin	4	Rear bolts on rear radius rod
	Clutch pedal shaft collar pin	4	Front spring U-bolts
		8	Rear backing plate bolts
	3/32X5/8		
3	Front brake plate assembly		1/8 X 3/4
2	Emerg. brake toggle connection link	16	Brake shoe roller pins
1	Hand brake lever arm- 28 only		
1	Hand brake lever sector		3/32 X 1
1	Hand brake lever arm- 28 only	2	Front radius ball cap
5	Universal joint outer cap		
1	Tail pipe clamp		1/8X1
8	Engine connecting rods	2	Front spring perch
1	Throttle bell crank	2	Spindle are
4	Shock arm bolts	2	Rear axle and gear shaft
2	Radiator mounting bolts	1	Rear radius rod - front bolt
		4	Rear spring retaining bar
	1/8 X 5/8	1	Starter rod- 28 only
1	Brake pedal to equalizer shaft- 28 only		
1	Brake pedal clevis pin		5/32X1
1	Brake pedal rod to cross shaft	2	Spindle assembly
8	Brake rod adjusting clevis		
1	Hand brake lever pawl pin		1/8 X 1-1/4
2	Emerg. brake lever to cross shaft rod	2	Side mount are support
1	Emerg. brake cross shaft to rear end	4	Shock link plug
1	Clutch pedal to release shaft ami trunnion		1/8X1-1/2
		2	Spindle connecting ball plug
	3/16 X 1	2	Drag link ball plug
1	Flywheel clean out hole	2	Transmission main drive gear- 28 only