

INDEX

	Page		Page
Adjustments		Gear Shifting	8-9
Brakes.....	42	Generator Charging Rate ...	33
Breaker points.....	28	Headlamps	
Carburetor.....	24	Focusing.....	35
Clutch pedal.....	11	Alignment.....	36
Fan belt.....	19	Bulbs.....	34
Front wheel bearings.....	39	Ignition Timing	28
Generator charging rate.....	33	Ignition Coil	34
Headlamps.....	35	License Data	4
Shock absorbers.....	44	Lubrication Chart	26-27
Spark plugs.....	34	Pedal, Clutch	
Ammeter	34	Adjustment of.....	11
Battery Instructions	32	Pump	
Bearings		Water pump packing nut....	19
Front wheel, adjustment of..	39	Radiator	
Brakes		Capacity.....	5
Adjustment of.....	42	Cleaning.....	19
Breaker Contact Points		Care of in winter.....	21
Adjustment of.....	28	Shifting Gears	8-9
Car		Setting the Spark	28
How to start.....	6-8	Shock Absorbers	44
How to stop.....	9	Spark Plug Adjustment	34
How to reverse.....	10	Speedometer	45
Proper way to wash.....	46	Starting	6-8
Storing.....	46	Stopping	9-10
Carburetor		Storage Battery	
Adjustment of.....	24	Care of.....	32-33
Cleaning.....	22	Storing the Car	46
Draining.....	22	Tank, Fuel	
Chassis Lubrication Chart	26-27	Capacity.....	5
Clutch Pedal Adjustment ...	11	Filling.....	5
Coil, Ignition	34	Draining.....	5
Cooling System	19	Timing, Ignition	28
Diagrams, Wiring	30-31	Tires	
Differential		Removal.....	39
Lubrication of.....	13	Mounting.....	40
Electrical System	28	Inflation.....	41
Engine		Care of.....	41
Starting.....	8	Top	
Stopping.....	9-10	Care of.....	46
Lubrication system.....	13	Transmission	
Summary of troubles.....	49	Lubrication of.....	13
Fan Belt		Water	
Adjustment of.....	19	Filling radiator.....	5
Front Wheel Bearings		Putting in battery.....	32
Adjustment of.....	39	In sediment bulb or carburetor	22
Fuel System	22	Water Pump Packing Nut ...	19
Gasoline Tank Capacity	22	Wiring Diagrams	30-31