

# INDEX

|                                  | Page  |                                | Page  |
|----------------------------------|-------|--------------------------------|-------|
| <b>Adjustments</b>               |       | <b>Gear Shifting</b>           | 8-9   |
| Brakes                           | 42    | <b>Generator Charging Rate</b> | 33    |
| Breaker points                   | 28    | <b>Headlamps</b>               |       |
| Carburetor                       | 24    | Focusing                       | 35    |
| Clutch pedal                     | 11    | Alignment                      | 36    |
| Fan belt                         | 19    | Bulbs                          | 34    |
| Front wheel bearings             | 39    | <b>Ignition Timing</b>         | 28    |
| Generator charging rate          | 33    | <b>Ignition Coil</b>           | 34    |
| Headlamps                        | 35    | <b>License Data</b>            | 4     |
| Shock absorbers                  | 44    | <b>Lubrication Chart</b>       | 26-27 |
| Spark plugs                      | 34    | <b>Pedal, Clutch</b>           |       |
| <b>Ammeter</b>                   | 34    | Adjustment of                  | 11    |
| <b>Battery Instructions</b>      | 32    | <b>Pump</b>                    |       |
| <b>Bearings</b>                  |       | Water pump packing nut         | 19    |
| Front wheel, adjustment of       | 39    | <b>Radiator</b>                |       |
| <b>Brakes</b>                    |       | Capacity                       | 5     |
| Adjustment of                    | 42    | Cleaning                       | 19    |
| <b>Breaker Contact Points</b>    |       | Care of in winter              | 21    |
| Adjustment of                    | 28    | <b>Shifting Gears</b>          | 8-9   |
| <b>Car</b>                       |       | <b>Setting the Spark</b>       | 28    |
| How to start                     | 6-8   | <b>Shock Absorbers</b>         | 44    |
| How to stop                      | 9     | <b>Spark Plug Adjustment</b>   | 34    |
| How to reverse                   | 10    | <b>Speedometer</b>             | 45    |
| Proper way to wash               | 46    | <b>Starting</b>                | 6-8   |
| Storing                          | 46    | <b>Stopping</b>                | 9-10  |
| <b>Carburetor</b>                |       | <b>Storage Battery</b>         |       |
| Adjustment of                    | 24    | Care of                        | 32-33 |
| Cleaning                         | 22    | <b>Storing the Car</b>         | 46    |
| Draining                         | 22    | <b>Tank, Fuel</b>              |       |
| <b>Chassis Lubrication Chart</b> | 26-27 | Capacity                       | 5     |
| <b>Clutch Pedal Adjustment</b>   | 11    | Filling                        | 5     |
| <b>Coil, Ignition</b>            | 34    | Draining                       | 5     |
| <b>Cooling System</b>            | 19    | <b>Timing, Ignition</b>        | 28    |
| <b>Diagrams, Wiring</b>          | 30-31 | <b>Tires</b>                   |       |
| <b>Differential</b>              |       | Removal                        | 39    |
| Lubrication of                   | 13    | Mounting                       | 40    |
| <b>Electrical System</b>         | 28    | Inflation                      | 41    |
| <b>Engine</b>                    |       | Care of                        | 41    |
| Starting                         | 8     | <b>Top</b>                     |       |
| Stopping                         | 9-10  | Care of                        | 46    |
| Lubrication system               | 13    | <b>Transmission</b>            |       |
| Summary of troubles              | 49    | Lubrication of                 | 13    |
| <b>Fan Belt</b>                  |       | <b>Water</b>                   |       |
| Adjustment of                    | 19    | Filling radiator               | 5     |
| <b>Front Wheel Bearings</b>      |       | Putting in battery             | 32    |
| Adjustment of                    | 39    | In sediment bulb or carburetor | 22    |
| <b>Fuel System</b>               | 22    | <b>Water Pump Packing Nut</b>  | 19    |
| <b>Gasoline Tank Capacity</b>    | 22    | <b>Wiring Diagrams</b>         | 30-31 |