

INDEX

	Page		Page
Adjustments		Gear Shifting	
Brakes	38	(Four speed transmission)	43
Breaker points	23	Generator Charging Rate	30
Carburetor	19	Headlamps	
Clutch pedal	11	Focusing	31
Fan belt	17	Alignment	32
Front wheel bearings	35	Bulbs	31
Generator charging rate	30	Ignition Timing	23
Headlamps	31	Ignition Coil	30
Shock absorbers	40	License Data	4
Spark plugs	30	Lubrication Chart (Car)	26-27
Water pump packing nut	17	Lubrication Chart (Truck)	46
Ammeter	30	Pedal, Clutch	
Battery Instructions	25	Adjustment of	11
Bearings		Pump	
Front wheel, adjustment of	35	Water pump packing nut	17
Brakes		Radiator	
Adjustment of	38	Capacity	5
Breaker Contact Points		Cleaning	19
Adjustment of	23	Care of in winter	19
Car		Shifting Gears	8-9
How to start	6-8	Shifting Gears	
How to stop	9	(Four speed transmission)	43
How to reverse	10	Setting the Spark	23
Proper way to wash	41	Shock Absorbers	40
Storing	42	Spark Plug Adjustment	30
Carburetor		Speedometer	41
Adjustment of	19	Starting	6-8
Cleaning	21	Stopping	9-10
Draining	21	Storage Battery	
Chassis Lubrication Chart		Care of	25-29
Car	26	Storing the Car	42
Truck	46	Tank, Fuel	
Clutch Pedal Adjustment	11	Capacity	5
Coil, Ignition	30	Filling	5
Cooling System	17	Draining	5
Diagrams, Wiring	28-29	Timing, Ignition	23
Differential		Tires	
Lubrication of	14	Removal	36
Electrical System	23	Mounting	36
Engine		Inflation	37
Starting	8	Care of	38
Stopping	9-10	Top	
Lubrication	11	Care of	42
Summary of troubles	51	Transmission	
Fan Belt		Lubrication of	14
Adjustment of	17	Truck—General Instructions	43
Four Speed Transmission	43	Water	
Adjustment of	35	Filling radiator	5
Front Wheel Bearings		Putting in battery	25
Adjustment of	35	In sediment bulb or carburetor	19
Fuel System	19	Water Pump Packing Nut	17
Gasoline Tank Capacity	19	Wheels (Truck) Installation	48
Gear Shifting	8-9	Wiring Diagrams	28-29