

## **Valve Spring Compression Tool #9280**

Removing the valve spring and keeper

- 1) Insert the hook into the tool.
- 2) Using the hook, hang the tool on the manifold.
- 3) Make sure the valve is in the closed position.
- 4) Insert the tool into the lowest coil of the spring above the keeper
- 5) Push down on the tool to raise the spring until it is fully compressed.
- 6) Remove the keeper
- 7) Remove the spring

Installing the spring and keeper

- 1) Place the spring in the upper area of the engine block over the valve guide
- 2) Place the bottom end to the spring in the valve tool and install over the valve lifter.
- 3) Lift the spring again and install the valve keeper.

## **BRATTON'S** **ANTIQUE AUTO PARTS**



**800-255-1929 Phone**  
**[www.brattons.com](http://www.brattons.com)**

800-774-1930 Fax  
1606 Back Acre Circle  
Mount Airy, MD 21771

*Your source for Quality Model A Ford Parts since 1976*