


A-6764 OIL BREATHER

Cleans crank-case of water vapors, gasoline and oil fumes! Keeps engine compartment clean and free of oil vapor!

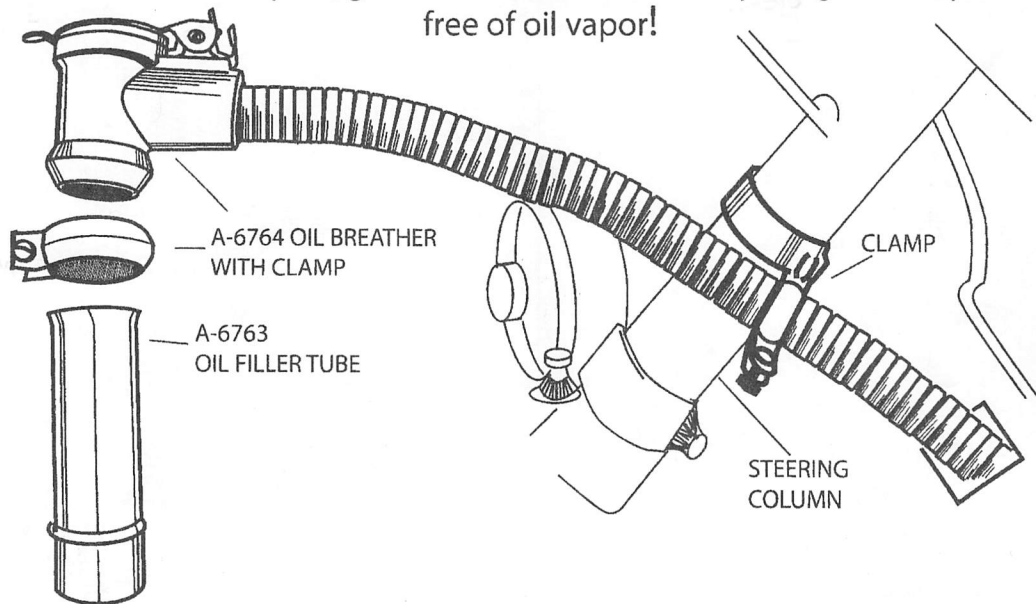

- Remove original oil cap and install breather assembly using clamp provided.
- Attach the tubing support clamp assembly to steering column and to flexible conduit as shown above.
- There is a square hole in the top of the motor mount where the flexible tubing should be routed. If you have an aftermarket motor mounts or a Float-A-Motor mount, you will have to route conduit elsewhere.