


Installing the Shroud

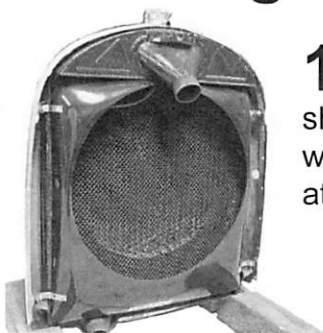


- 1** Position shroud on radiator with *wide edge* at bottom.



- 2** At the top of the shroud, secure a small bracket... using a 1/2" No. 12 bolt and lock nut




- 3** At the bottom of the shroud, refasten the radiator, using a new 3/4" No 12 bolt and the existing square nut and a lock nut.

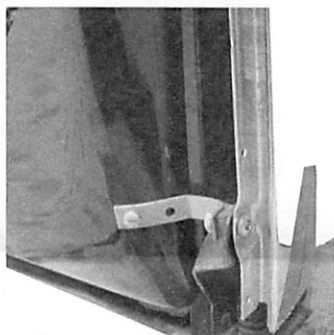


- 4** Attach a large bracket with a 3/4" bolt and lock nut.

- 5** Repeat Steps 2, 3 and 4 on the other side of the shroud

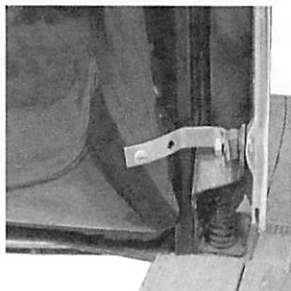

- 6** Secure all four brackets to the shroud using 1/2" No. 10 bolts and lock nuts

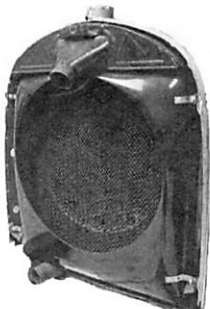

Shroud Installed

Note: Shroud may fit a little tight at the lower radiator hose outlet..
Shave a little material to fit.

Manufacturer assumes no responsibility for injuries resulting from the use of this product.