

1. Disconnect the battery cable. Then remove starter button and install locking collar about half way down on the starter switch. Tighten with Allen wrench. (See Illustration 1).

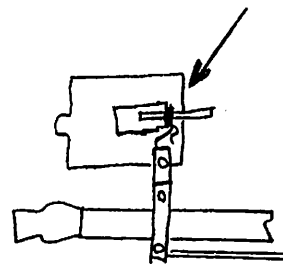


Illustration 1

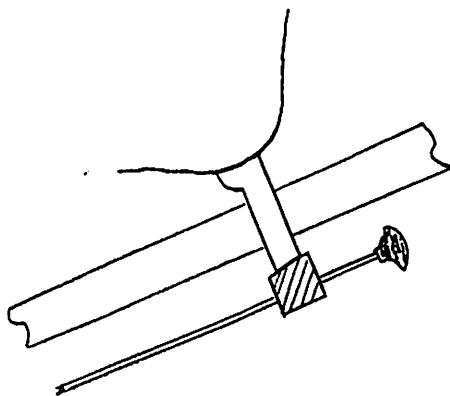


Illustration 2

2. Remove screw on the left side of the steering column clamp & replace with supplied holder and bolt. (See Illustration 2).

3. Then install bell crank & clamp around steering column. With the bell crank on bottom of the column & the lever over the starter switch. Then tighten all bolts using supplied locknuts & install rod in bell crank protruding through the floor board. (floor board may need slight modifications so rod does not drag on toe board) Insert through bushing on steering column clamp & install knob & reinstall starter button. Reconnect the battery cable and enjoy your new hand start. Use supplied locknuts only. (See Illustration 3).

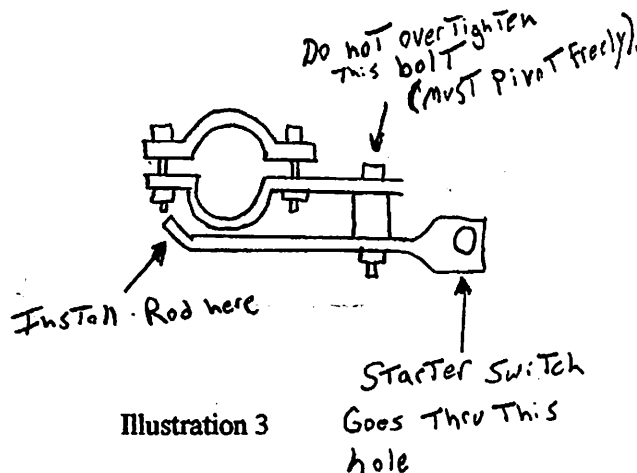


Illustration 3

Short Rod - 28 through early 31 with column support on gas tank.  
Long Rod - Late 31 with column support on belt rail.