


HORN RESISTOR

REMOVE YELLOW WIRE FROM
HORN TERMINAL BRACKET
AND INSERT INTO WIRE
CONNECTOR

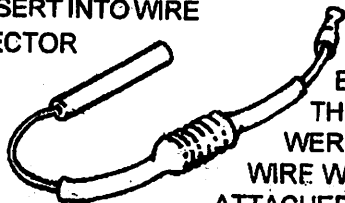

INSERT THIS
END BACK INTO
THE TERMINAL
WERE THE YELLOW
WIRE WAS ORIGINALLY
ATTACHED.

CAREFULLY POSITION RESISTOR INSIDE HORN COVER
SO NOTHING TOUCHES THE MOTOR. THE RESISTOR
WILL GET HOT WHILE THE HORN HONKS.