


Pickup Rain Gutter Installation Instructions

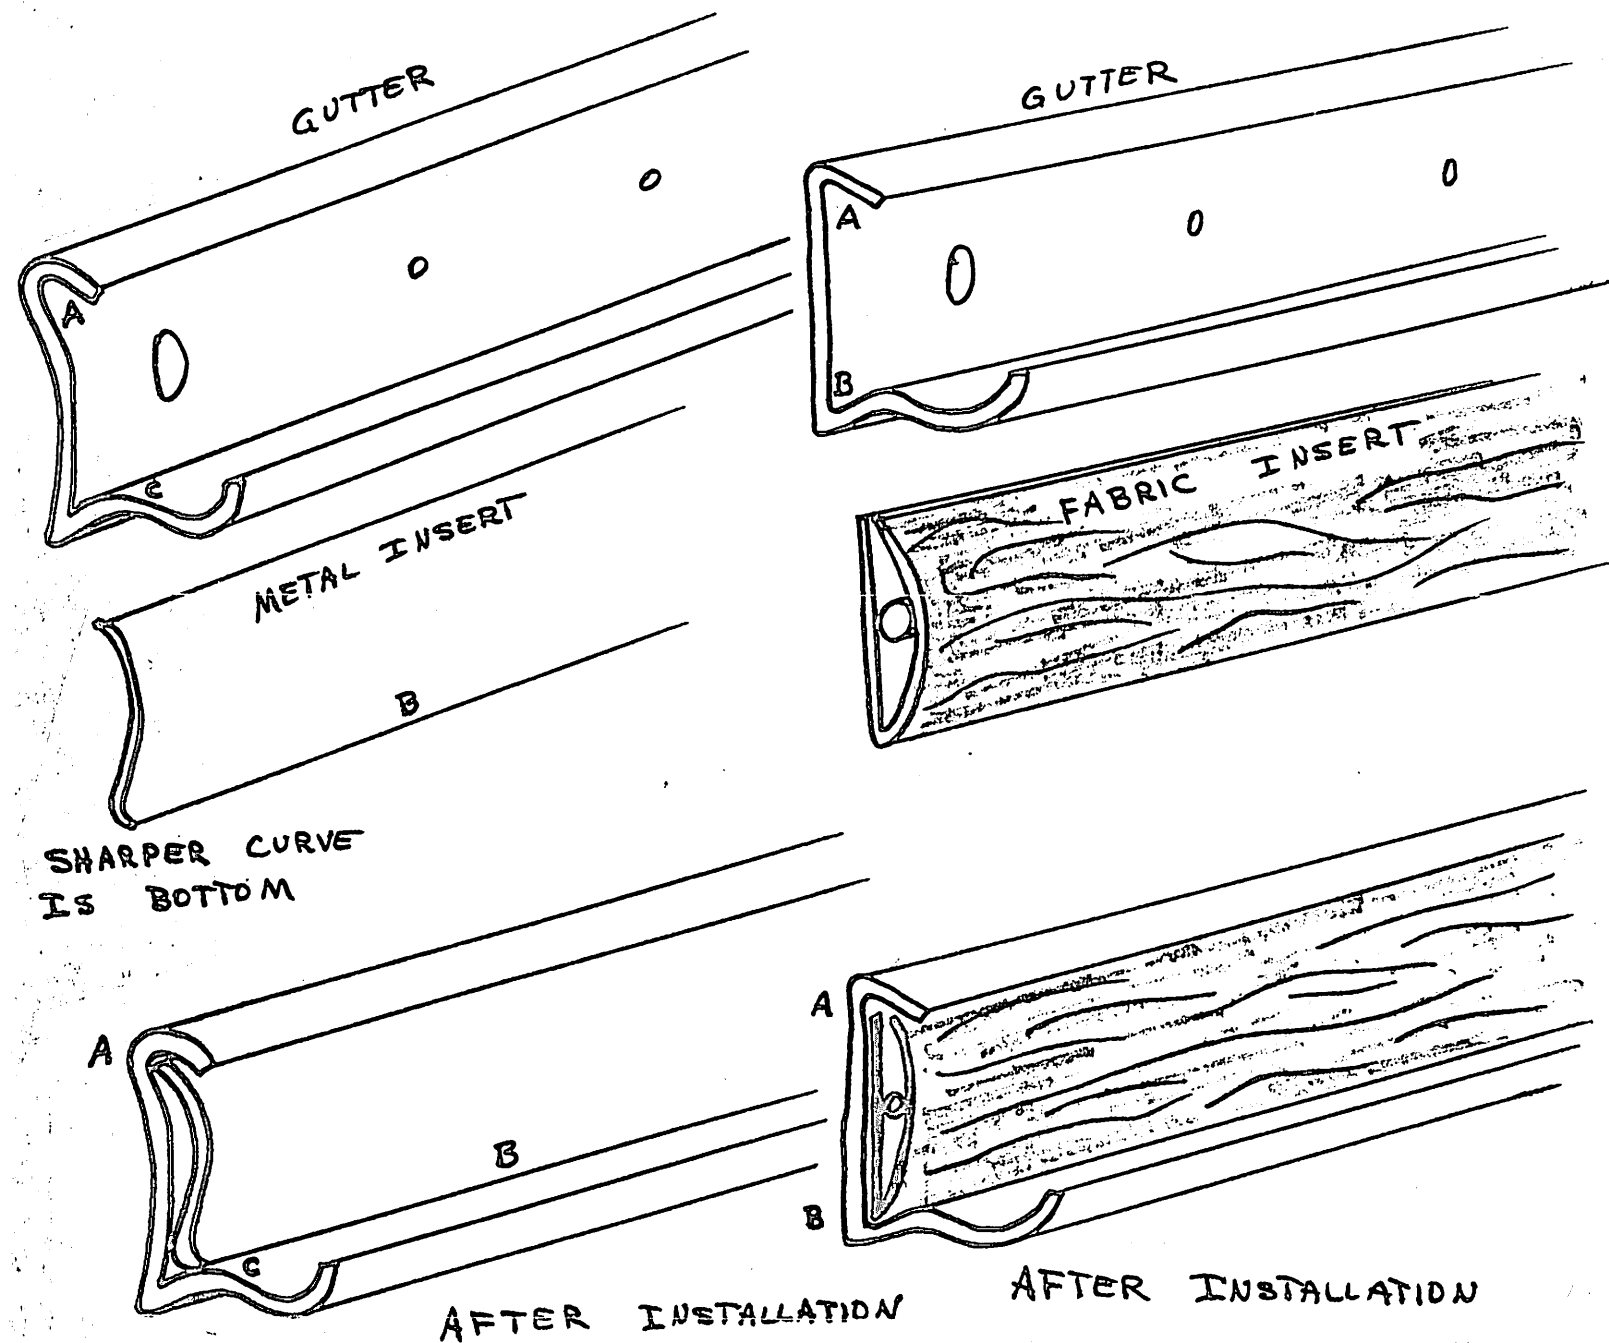

1928-29

Screw and nail gutter to wood above door with fasteners provided. Slide top edge of metal insert into top slot in gutter (marked A). Using a 30" x 1" straight piece of sheet metal and a hammer, force lower edge of insert piece (marked B) over hump in gutter (marked C). Attempting to snap the insert into the gutter without using this sheet metal tool may damage the insert.

1930-31

Screw and nail the gutter to wood above door with fasteners provided. Fold fabric insert over jute cord and slide its two edges into slot in gutter (marked A). Work folded edge into lower slot (marked B) with a dull screwdriver blade.

65200/65201