


**RESTORING
LEAKY GAS
SHUTOFF
VALVES**

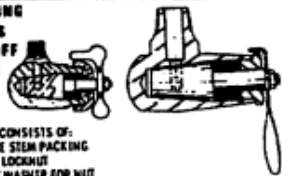

THIS KIT CONSISTS OF:

- (1) VALVE STEM PACKING
- (1) THIN LOCKNUT
- (1) LOCK WASHER FOR NUT
- (1) TIN SPECIAL STOP LEAK PASTE

RECOMMENDATIONS TO RESTORE LEAKY SHUTOFF VALVES

- 1) REMOVE HANDLE & PACKING NUT - PRY OUT OLD PACKING
(NOTE POSITION OF HANDLE)
- 2) PULL OUT VALVE STEM - REMOVE ANY NICKS & CLEAN SMALL
CONCENTRIC GROOVES WILL BE NO PROBLEM.
- 3) INSERT NEW PACKING - APPLY STOP LEAK PASTE ON
PACKING & STEM BODY.
FOR MOST 28-29 MODELS HAVING SMALL
STEM & SPRING UNDER CAP, IT WILL BE
REQUIRED CUT OFF ABOUT 1/4 IN DIAGONALLY
PER SKETCH USING SHARP KNIFE OR RAZOR.
- 4) REINSTALL STEM & PACKING - TIGHTEN PACKING NUT TO
SLIGHT DRAG - (FOR 28-29 TYPE TAMP IN WITH 5 WALL
SCREW DRIVER.



INSTALL HANDLE, WASHER, & NUT

THIS KIT WILL ALSO SERVICE THE 1931 FIREWALL VALVE & WORKS
ON VALVES OF ALMOST ANY CONDITION.

PACKING IS FRAGILE - DO NOT CRUSH.

STOP LEAK PASTE IS USEFUL ON ALL FUEL LINE THREADS.